



1.

Locate crossbars with open end (no caps) and install on BOTTOM brackets of uprights. Repeat for other side. NOTE: Crossbar brackets face inward of rack.

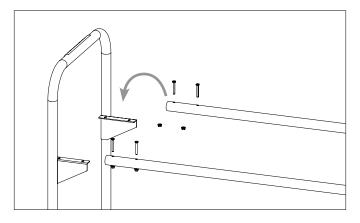


3.

Install 2 remaining crossbars on top of uprights. Repeat for both sides.

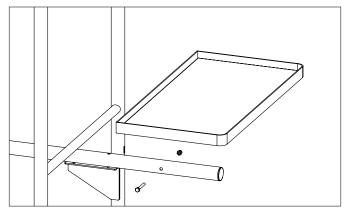


5.

Apply large flat shelf onto extension bars. Secure to extension crossbars under shelf with hardware provided.

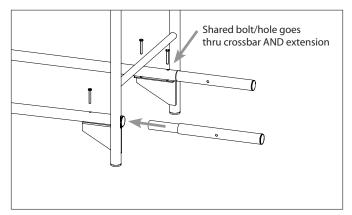


2.

Insert extension bars into bottom open ended crossbars. NOTE: Extension bars share outside hole/bolt with bottom crossbars.

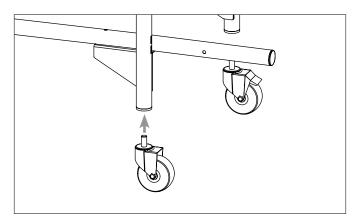

4.

Once frame is complete, thread casters into bottom of uprights. Place locking casters on opposite sides.

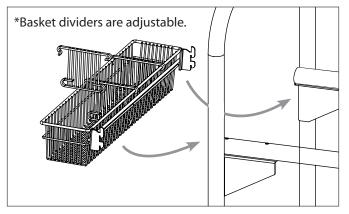

6. Insert basket shelves into each side of the unit.